



**REMEMBER:**

Before installing or adjusting your sights, unload and/or check to ensure the firearm is unloaded.

**XS Ghost-Ring Aperture Sight Installation**

1. Place the gun in a padded vise.
2. Remove the plug screw(s) from the rear scope base holes.
3. Degrease the sight and receiver.
4. Apply a small amount of red threadlocker to the bottom of the sight and spread it around so a thin layer covers approximately 80% of the base. Too much compound can crawl into the action, locking up critical moving parts. Place the sight on the receiver so that the mounting holes align. For sights with a protruding stud, press the stud into the mounting hole. Mount the sight so that the aperture is closest to the shooter's eye (if applicable).
5. Apply a very small amount of red threadlocker to the screw threads up near the head and tighten.

**To Change the Aperture:**

1. Back off one windage screw three full turns.
2. Remove the aperture by turning it counterclockwise.
3. Install the new aperture by turning it in clockwise until it bottoms out. Then unscrew 3 full turns to achieve the aperture's basic starting position.
4. Tighten the windage screw and rezero the rifle.